


## Funkwerk/Filser TRT800 Lathund

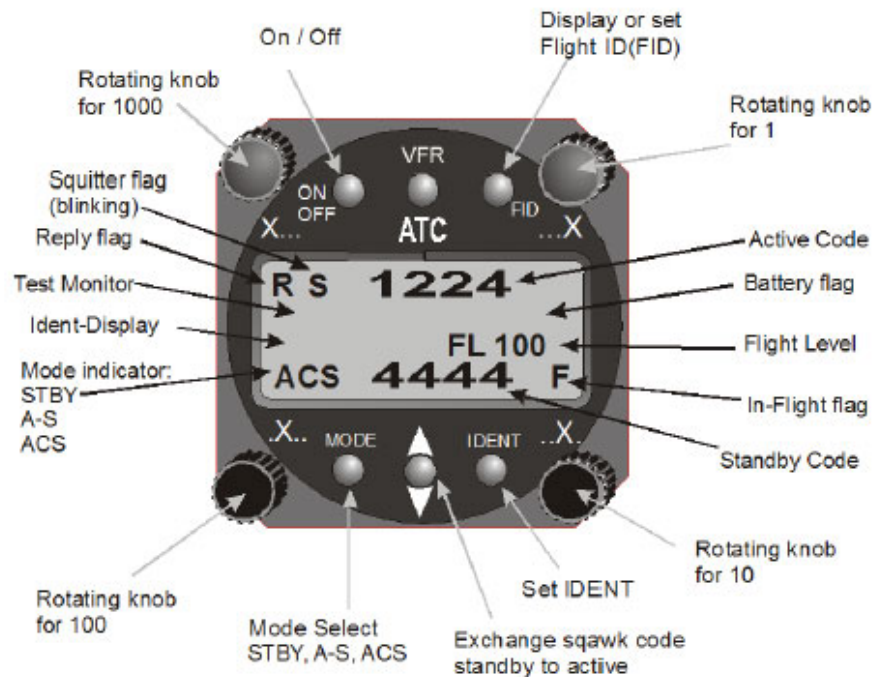

At switch on, the display shows the model number and software versions.

Press MODE repeatedly until display shows STBY at lower left. Use the four knobs to set the required code - which will appear lower centre of the display.

Then press the up/down arrow button to make the code active, and the upper and lower code will swap.

When required to transmit, press MODE repeatedly until display shows ACS lower left. Mode A, C, and S are selected  
A-S mode - no altitude - is also available.

FID - At present, leave alone

IDENT is for Squawk Ident

VFR - Leave alone. The instrument has US software and selects US codes.

Ex.	Meaning	Comment
R	reply indicator	showing with each answer
S	Squitter	showing with each squitter
E	Extended squitter	
1224	active squawk value	
PLL	PLL error	internal error
TRX	transmitter error	
ANT	antenna mismatch	check antenna (connection)
DC	internal voltage failure	internal error
FPG	FPGA dialogue error	internal error
BAT	low battery error	check battery/charger
IDT	SPI transmission	SPI pressed
FL0100	flight level (multiply by 100 ft)	
FLerr	faulty altitude value	Outside the range of -1000 to 15000 ft, mode C is disabled.
ACS	mode STBY, A-S, ACS	
4444	stand-by squawk value	
F	in-flight	status of ground switch
G	on-ground	(if connected)